



Samsung DV300F Front LCD Screen Replacement

This guide will serve as a replacement guide for the Front LCD Screen.

Written By: Timothy Gordon



INTRODUCTION

This guide will show how to remove the Front LCD Screen.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Front and Rear Casing



- Remove the two black Phillips 4.2mm #0 screws on the right edge
- Remove the two black Phillips 4.2mm #0 screws on the left edge
- Remove the black Phillips 4.2mm #0 screw on the bottom

Step 2




- Peel off the back casing

Step 3




- Peel off the front casing
- Peel off the front LCD so the front casing is completely free

Step 4 — Back Button Control

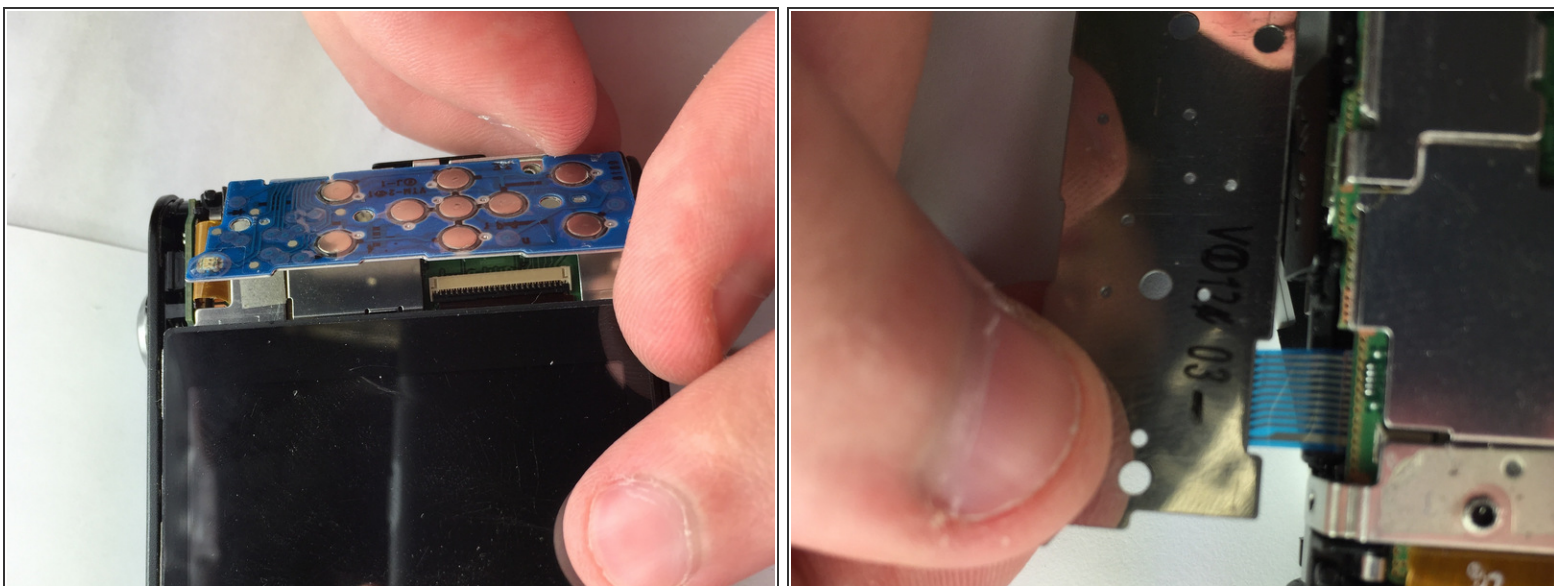



- Remove the back button control from its nesting
- Pull the tape connection to disconnect the back button control from the rest of the camera

Step 5 — Back LCD Screen

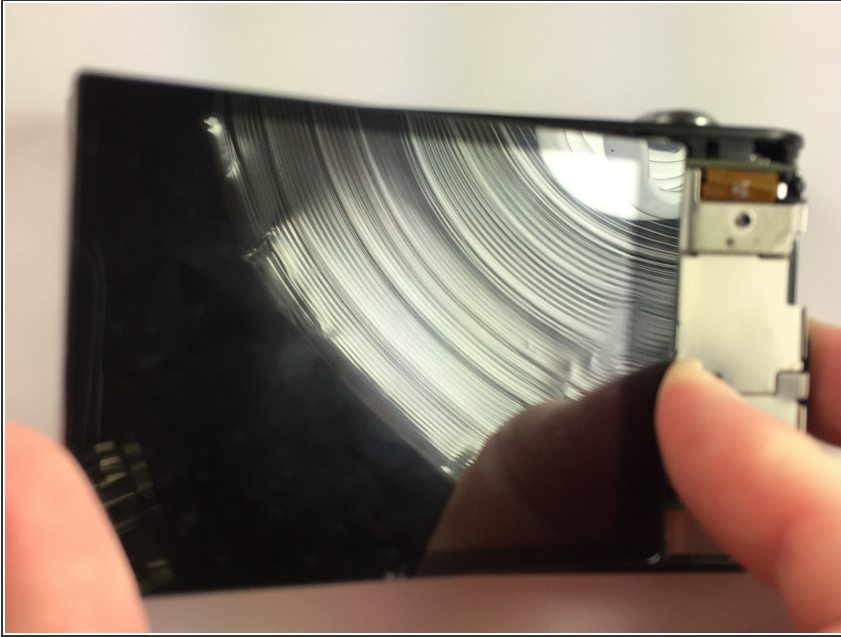



- Remove the Back LCD screen from its nest.

Step 6

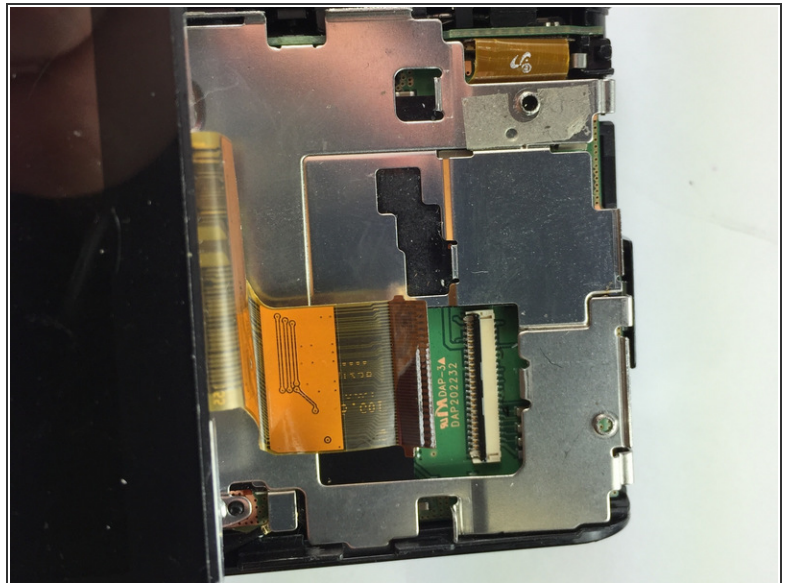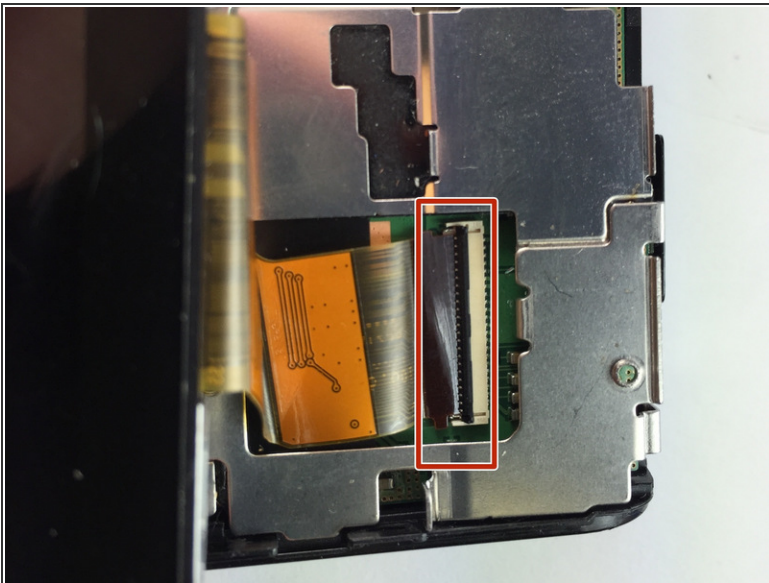



- Flip the black tab where the Back LCD screen connects to the circuit board
- Pull the tape connection to disconnect the Back LCD screen from the circuit board

Step 7 — Front LCD Screen

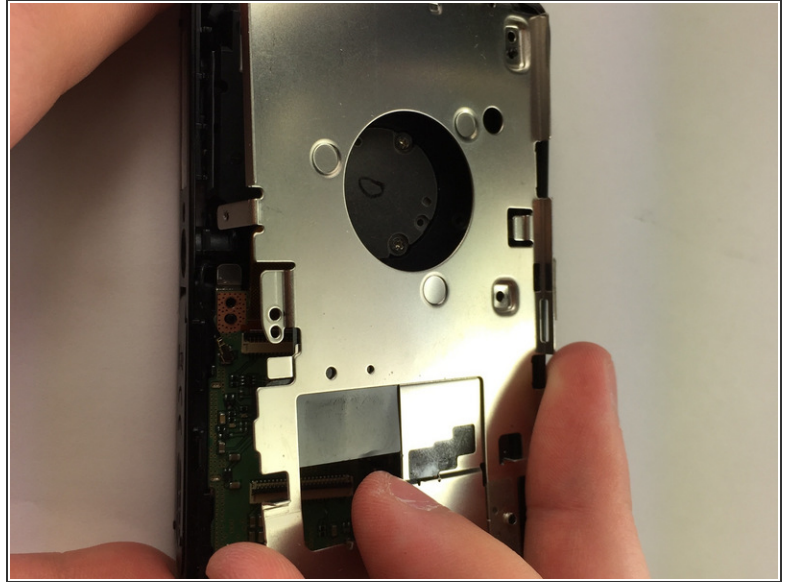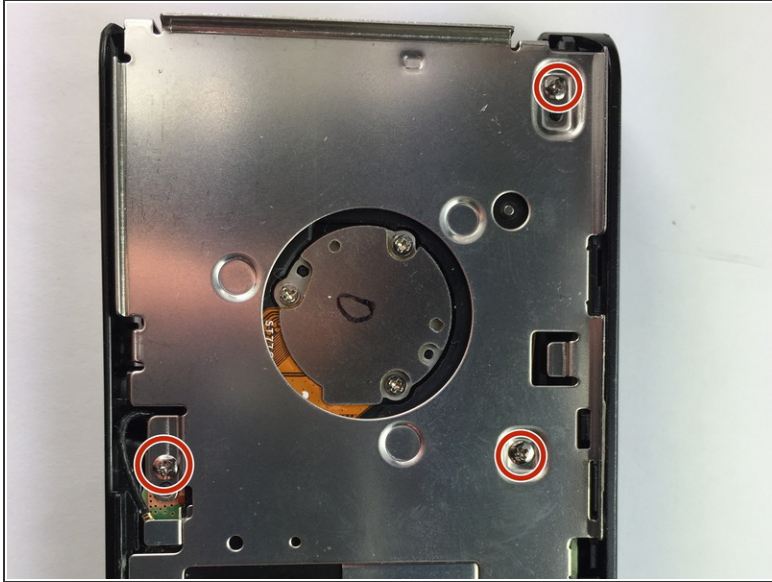

- Unscrew the 3 silver Phillips 4.5mm #0 screws from the circuit board cover
- Remove the circuit board cover

Step 8

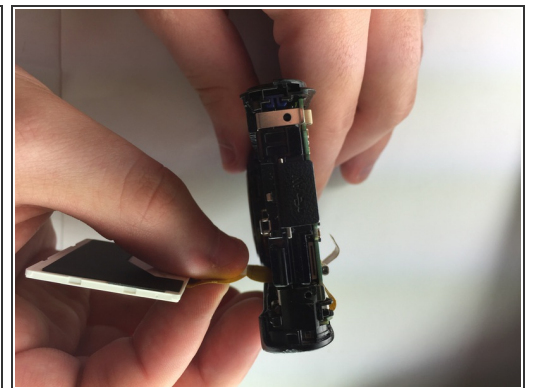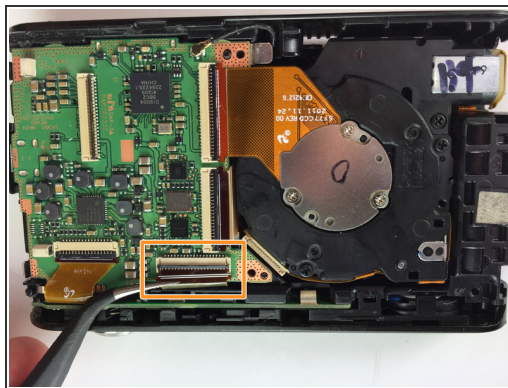

- Flip the black tab where the front LCD screen connects to the circuit board
- Pull the tape connection to disconnect the front LCD screen from the circuit board
 - ⓘ This can be done easily with your fingers
- Pull the Front LCD screen from the front to remove it from the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 07:59:00 PM.